


Side Mount Opener - Wiring Details

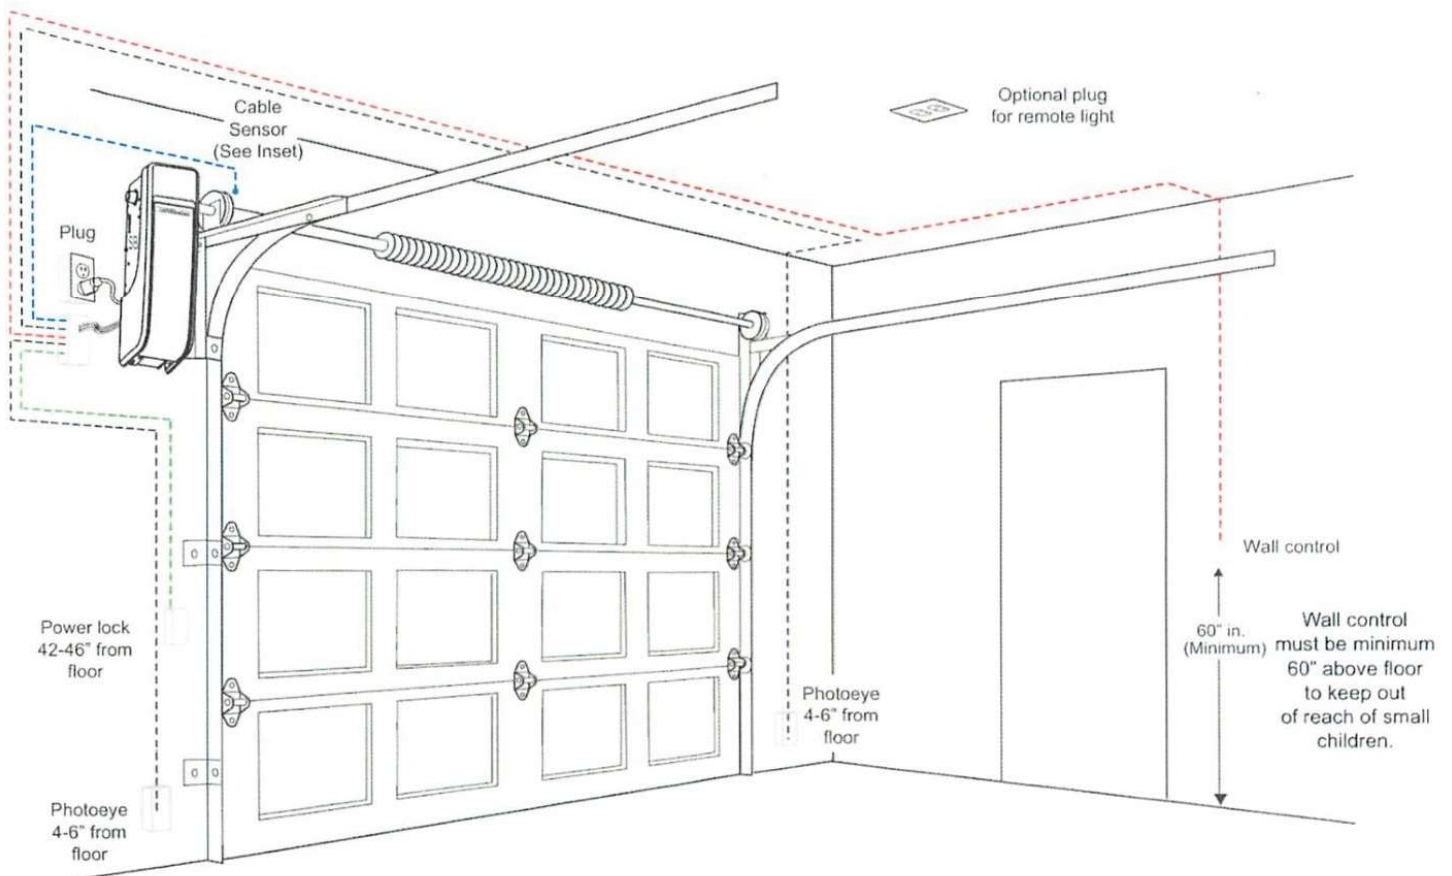

Notes:

- Use 2 conductor 22ga or larger wiring for low voltage runs
- Install plastic gang boxes with blank cover plates for best results
- Leave MIN 18" extra LV wire protruding at photoeye, power lock, cable sensor, and wall control. If in doubt leave extra.
- Leave MIN 36" extra LV wire protruding at operator box.
- Follow electrical code for all installations, supply power and low-voltage control wiring must be ran separately

Checklist:

- ☐ Main plug
- ☐ Photoeye wiring to BOTH Sides
- ☐ Wall control wiring to desired location, 60" high
- ☐ Power Lock wiring
- ☐ Cable sensor wiring

